

# Digital Multi-Range 3Ø Voltage Monitor

# **DPM**

# **Specifications**

#### **Electrical**

Line Voltage: 115 to 277VAC, 1Ø

200 to 600VAC, 3Ø Supply Voltage:

12VDC, 24VDC, 24VAC, 120VAC &

240VAC,1Ø, ±10% **Frequency:** 50/60Hz

Display:

16 Character, 2 line, LCD back lighting

Adjustments:

Membrane Buttons & Display

Nominal Voltage: Adj. 200 to 600VAC Over/Under Voltage: Adj. 7% to 15% Phase Imbalance: 3% to 10% Phase Rotation: A - B - C

Delays:

Trip Delay: Adj. 2 sec. to 10 sec.

Re-Start Delay: Adj. Manual Reset to 4 min.

Power Consumption: 2.1VA

## Output Rating @ 25°C:

10 Amps @ 120VAC 6 Amps @ 277VAC 1/8 HP @ 120/277VAC 5 Amps @ 30VDC

### **Physical**

Mounting: Surface Mounting (2 screws)

Termination:

Line Side: 1/4" Push-On Tabs Control Side: 0.187" Push-On Tabs **Packaging:** Dust Cover & Epoxy Fill

Weight: 1 Pound

## **Ambient Temperatures**

### Operating:


T - Tabs -40°C\*\* to 65°C

B - Terminal Blocks -40°C\*\* to 59°C
\*\*Display & membrane may not function below -20°C.


Storage: -40°C to 85°C

# Ordering Information PM - 24A - B Special XXXX - Special XXXX - Special XXXX - Special Termination T - Tabs B - Terminal Blocks 120A - 110-120VAC 240A - 208-240VAC

# **Dimensions**

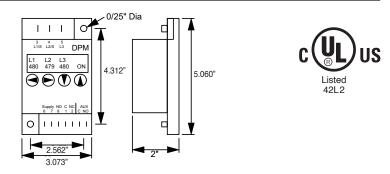

# **Connections**

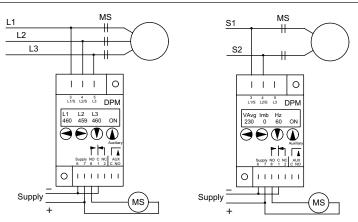



# **Voltage Ranges:**

- · 115 to 277VAC, 1Ø
- · 200 to 600VAC, 3Ø

# **Digital Display:**

- Line Voltages
- Frequency
- · Imbalance %
- Output Relay Status
- Last 4 Faults
- · Set-Up Menus

# **SPDT & 1NO Contacts**

# **Operation**

The DPM is a Digital Phase Monitor that will monitor line voltages from 115VAC up to 600VAC. Actual line voltages and set-up parameters are set via the digital display. The supply voltage must be available during operation.

With the supply voltage active, you can set-up all of the DPM's settings without the line voltage connected.

When the DPM is connected to the line voltage, it will monitor the line and if everything is within the set-up parameters, the output contacts will be activated. If the line voltages fall outside the set-up parameters, the output relay will be de-enegized after the trip delay.

Once the line voltages recover, the DPM will re-energize the output relay after the re-start time delay (manual to 4 minutes).

All settings and the last 4 faults are retained, even if there is a complete loss of power.